



For Mercola.com Customer Service  
Call 877-985-2695 or visit [support.mercola.com](http://support.mercola.com)

# **30 LAMP MERCOLA REFRESH BOOTH LIGHT SYSTEM**

## **USER MANUAL**

**Tanning systems are warranted to be free from defects in workmanship as follows:**

**(5) Years on all metal structural components**

**(1) Year on electrical components**

**(90) Days on plastics and lamps**

Dealer's obligation under this warranty is limited to the repair and/or replacement of any defective part without charge for that part, at the manufacturer's discretion, with the following limitations:

- This warranty is extended only to the original purchaser appearing on the sales receipt and is non-transferable.
- This product is designed for use by one person at a time.
- Only original parts may be used.
- All major repairs must be completed by an authorized service representative.
- This warranty does not cover transportation charges on the parts.
- Labor costs are not reimbursable for repair or replacement of items.

Dealer disclaims any responsibility for transportation. Dealer further disclaims any responsibility for injury resulting from the failure of equipment or parts due to incorrect installation or operation.

Dealer shall not be liable for loss or damages caused either directly or indirectly from the use of its products. This limited warranty does not extend to any products which have been damaged as a result of accident, misuse, abuse, or as a result of service or modification by anyone other than an authorized service representative.

This warranty does not apply to any failure of parts or products due to alterations, modifications, misuse, abuse, accidents, improper maintenance, or failure to follow the specified electrical requirements. Such occurrences immediately VOID this warranty. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY. No person, firm, or corporation is authorized to assume for us any other liability in connection with the sale of these goods

**USE OF THIS PRODUCT IN A COMMERCIAL TANNING FACILITY OR FOR PROFESSIONAL AND MEDICAL SERVICES AUTOMATICALLY RESULTS IN THE VOIDING OF ANY AND ALL MANUFACTURER'S WARRANTIES!**

***THIS PRODUCT IS IN CONFORMITY WITH PERFORMANCE STANDARDS FOR SUN LAMP PRODUCTS UNDER U.S. FDA SECTION 21 CFR PART 1040.20.***

## Congratulations

Thank you for choosing our booth system for your tanning pleasure. This tanning system is designed to give you many years of dependable, trouble-free enjoyment in the comfort of your own home.

## Table of Contents

Warranty .....	2
Safety Information .....	4
Specifications/Info .....	4
Electrical Requirements .....	5
Set Up and Assembly Instructions .....	7-11
Pre-Tanning Guidelines .....	12
Using The Tanning Booth .....	13
Recommended Exposure Times .....	13
Electronic Timer Instructions .....	14
Caring For and Maintaining Your Tanning Booth .....	15
Acrylic Removal and Re-installation .....	15-16
Lamp Removal and Re-Installation .....	16
Lamp Cleaning and Replacement .....	17
Helpful Service Hints .....	17
How to Obtain Service .....	17
Frequently Asked Questions .....	18
Photosensitivity .....	19
Pregnancy .....	20
Record Your Warranty Information .....	22
Warning Label Information .....	23

**Please read entire manual before  
attempting to operate this tanning unit!**

## Safety Information

**Label Notice:** The United States FDA (Food & Drug Administration) requires that a warning label is provided to inform the user of possible dangers as stated in 21 CFR (Code of Federal Regulation), part 1040.20. Review the information on this label located on the front of your tanning booth and on page 24 of this manual.

**Tan smart and avoid overexposure.** If you do not tan in the sun, you will not tan from this product. As with natural sunlight, overexposure can cause eye and skin injury and allergic reactions. Allow 48 hours between sessions. To ensure optimum smart tanning, please refer to the recommended exposure time chart. (Refer to Table of Contents.)

**Use of certain medications or cosmetics may increase your sensitivity to the ultraviolet radiation.** Consult your physician before using any tanning booth if you are using medications or have a history of skin problems or believe you are sensitive to sunlight. (Refer to Table of Contents.)

**Recommended eyewear:** One pair of protective eyewear, approved by the FDA, is furnished with this equipment. Protective eyewear should be worn by all persons in the room when lamps are on. Failure to wear protective eyewear during each tanning session may result in severe burns or long-term injury to the eyes.

**Only the following lamps may be used in this tanning system. Use of any other lamp voids the warranty.**

Solara Supreme (532003)      Solara ReNew (532005)      Solara ReFresh (532009)




**Disconnect power cord before attempting to clean, re-lamp, or engage in the maintenance of this product. This equipment must be earth grounded.**



**DO NOT operate the tanning booth while wet or near water.**

## Tanning Booth Specifications/Info

Model	Size HxW"	Weight (lbs.)	Voltage (Volts)	Amps (Rated)	Dedicated Breaker Amps	NEMA Receptacle	Timer*
ReFresh 30	77x48	270	120	17.5	20	5-20R 	Mechanical

\*All booth models have a maximum exposure time of 10-minutes. Refer to Table of Contents for more information on timers.

## Pre-Installation Planning


Before you begin to assemble your tanning booth, please read the following information.

## Electrical Requirements

**⚠ VERY IMPORTANT!  
MUST READ!**

**EVERY Tanning Booth REQUIRES a 20 Amp  
DEDICATED Circuit Breaker.**  
**This means that your tanning booth is the ONLY  
electrical device operating on that circuit breaker.**

**All 120 Volt booths require a  
NEMA 5-20R Receptacle.**

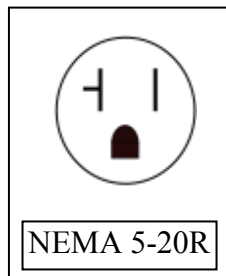

Proper voltage is **ONLY** between 100 and 130 Volts.  
*A qualified electrician may be needed to assist in fulfilling these requirements.*

Additionally a very easy way of protecting your tanning booth from potential electrical damage due to power surge or spikes is to **UNPLUG** the unit when **NOT** in use.

**Failure to comply with these electrical requirements will  
VOID ALL WARRANTIES and will damage electrical  
components!**

**WARNING: HIGH LEAKAGE CURRENT – ENSURE PROPER GROUNDING.**

**WARNING: GROUNDING CIRCUIT CONTINUITY IS VITAL FOR SAFE OPERATION OF  
EQUIPMENT. NEVER OPERATE WITH GROUNDING CONDUCTOR DISCONNECTED.**

**FOR ADDITIONAL ASSISTANCE: PLEASE**  
**REVIEW THE HELPFUL SERVICE AND**  
**MAINTENANCE HINTS IN THIS USERS**  
**MANUAL... IF YOU**  
**HAVE ADDITIONAL QUESTIONS...**  
**REQUIRE TECHNICAL SUPPORT...**  
**INTERESTED IN PURCHASING TANNING**  
**ACCESSORIES...OR FUTURE**  
**UPGRADES FOR NEW LAMPS... DO**  
**NOT HESITATE TO CONTACT THE**  
**AUTHORIZED DEALER SERVICE**  
**DEPARTMENT WHERE YOU PURCHASED**  
**YOUR TANNING BOOTH.**

## Location Requirements

Make sure the room size is at least 8' x 8' x 8' and is well ventilated. Air from the room is used to cool your tanning booth, which helps to ensure years of trouble free performance. Poor ventilation may cause the unit to overheat and cause discomfort to the user as well. Place your tanning booth no closer than one foot from any wall. Be sure that curtains, drapes, and other room furniture is not obstructing the airflow into the end caps of the booth. Due to the nature of the booth, it is best to place it in a corner, allowing enough room for the door to swing open.

## Unpacking Instructions

**Your tanning booth comes in three cardboard cartons: two for the stationary sections and one for the door section.**

Remove the three sections from the plastic bags. The door box contains the hardware box.

Inspect all items thoroughly for any visible damage. Report any such damage to your Authorized Dealer immediately.

## ASSEMBLY INSTRUCTIONS




Proper assembly of your tanning booth requires two people.

**Tools required** – In addition to the supplied hex key, assembling the tanning booth requires an adjustable wrench.

## Parts List

Item	Description	Quantity
A	Stationary Hinge	2
B	Bottom Door Hinge	1
C	Top Door Hinge	1
D	5/16 x 1 ½ Allen Bolt	8
E	Leveler	4
F	Caster	2
G	Allen Wrench	1
H	Leveler Nut	4


## Included Hardware

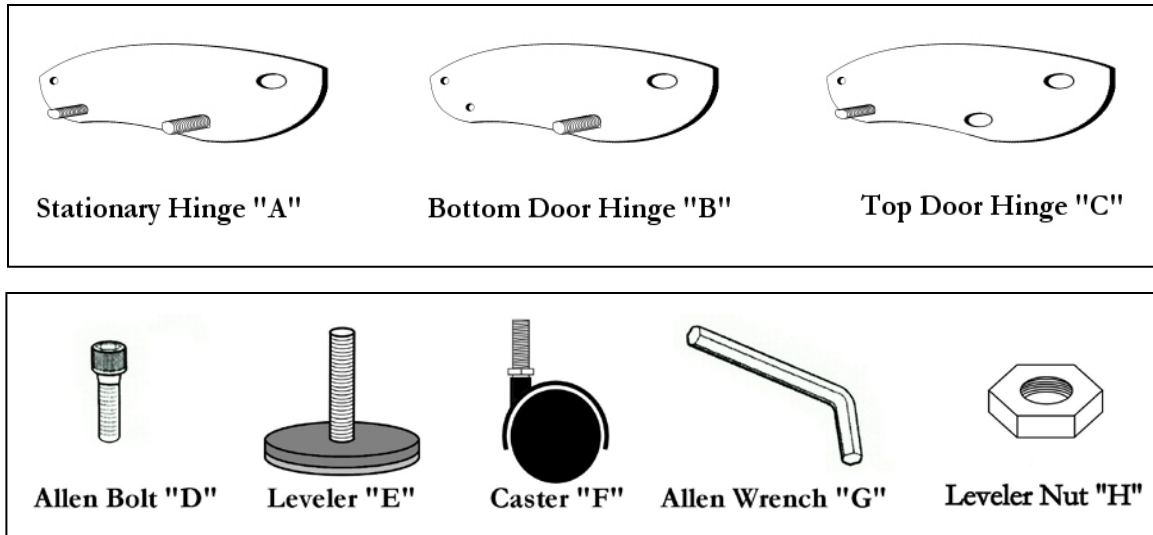

## Attaching Hinge to Bottom of Sections 1 and 2 – Figure 1a


- Step 1. Lay sections one and two next to each other on a soft material (i.e. carpet) with the lamps facing down, and with the male and female power cords aligned. Section one contains the timer and main power cord. Section 2 has the short, inter-connecting power cords on both sides.
- Step 2. Thread nuts “H” onto the levelers “E” then thread the leveler shafts into the end cap holes “3” as shown in figure 1a so that they protrude about 2 inches. Snug the nuts against the end caps. If necessary, use an adjustable wrench on the levelers at the base of the threaded portion. **DO NOT OVER-TIGHTEN! BE CAREFUL NOT TO STRIP THE THREADS!**
- Step 3. During this step, make sure that the inter-connecting power cords are securely connected. Do not pinch the cords between the rails of the two different sections. Have one person at the top end of the unit, and another person at the bottom end. Both people need to raise the units in the center where they meet in order to insert the guide bolts of hinge “A” into the “1” holes of the end caps at the bottom end of the unit. The person at the top end of the unit can hold the two units up in position, while the person at the bottom end threads bolts “D” through hinge “A” into the “2” holes of the end caps. Use the supplied allen wrench to tighten these bolts. **DO NOT OVER-TIGHTEN!** Continue supporting the two sections through the next step.



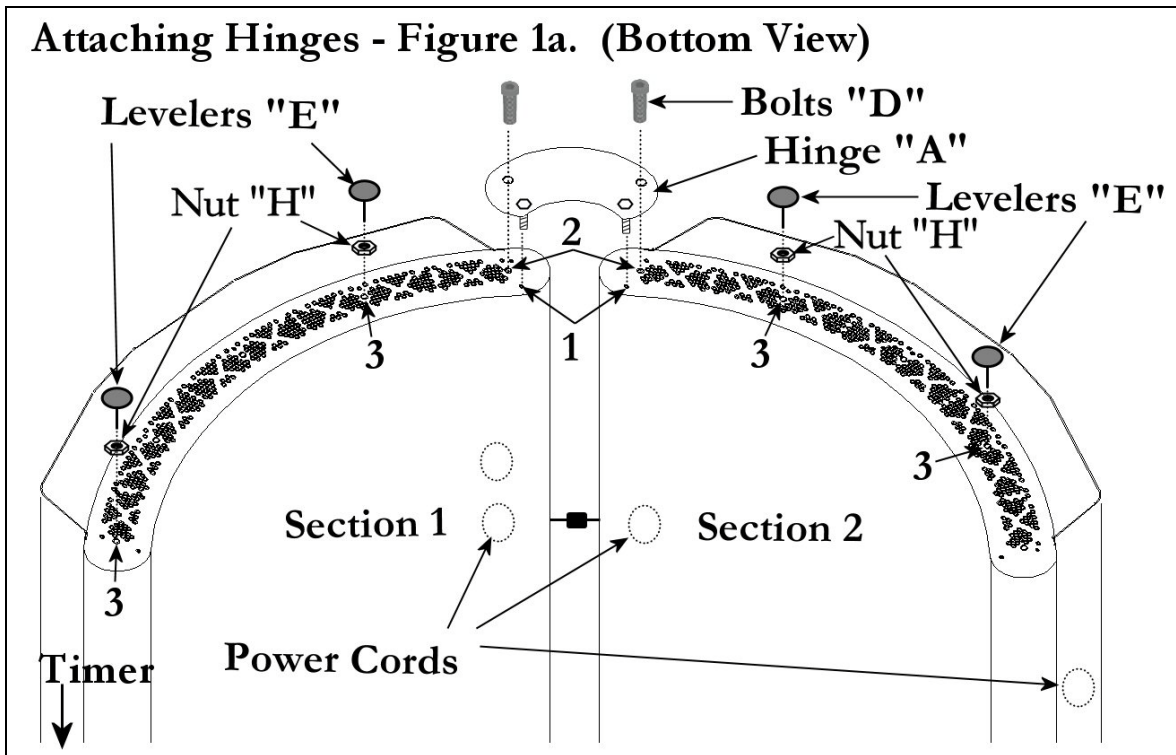


### Attaching Hinge to Top of Sections 1 and 2 – Figure 1b

- Step 1. Align the guide bolts of hinge “A” through the “1” holes in the end caps at the top end of the units as shown in figure 1b.
- Step 2. Thread bolts “D” through hinge “A” into the “2” holes of the end caps, and tighten with the supplied allen wrench. **DO NOT OVER-TIGHTEN!**

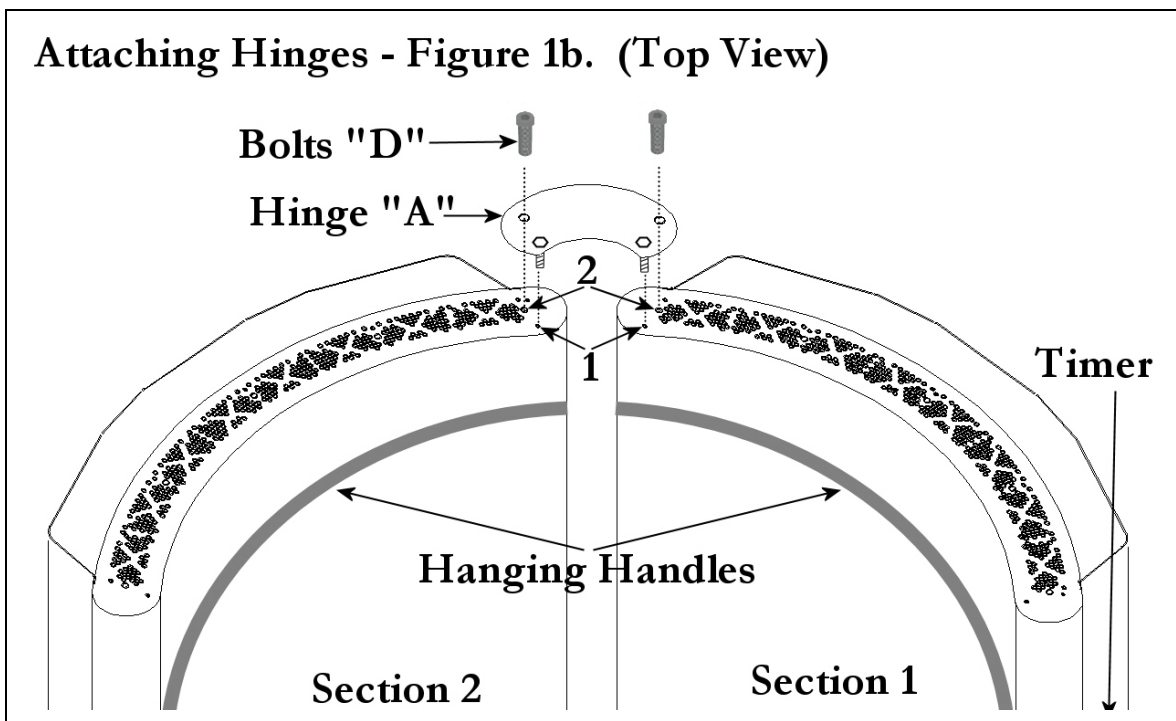

## Attaching the Door to Bottom of Section 2 – Figure 1c


- Step 1. Thread the casters "F" into the "3" holes in the end caps as shown in figure 1c. Tighten with the adjustable wrench. DO NOT OVER-TIGHTEN!
- Step 2. Align the guide bolt of hinge "B" through the "1" hole in the end cap at the bottom of section 2.
- Step 3. Thread one of the "D" bolts through hinge "B" into the "2" hole of section 2.
- Step 4. Have one person hold the joined sections 1 and 2 in position to allow the other person to thread the next "D" bolt through hinge "B" into hole "2" of section 3. Tighten the bolts with the supplied allen wrench. DO NOT OVER-TIGHTEN!

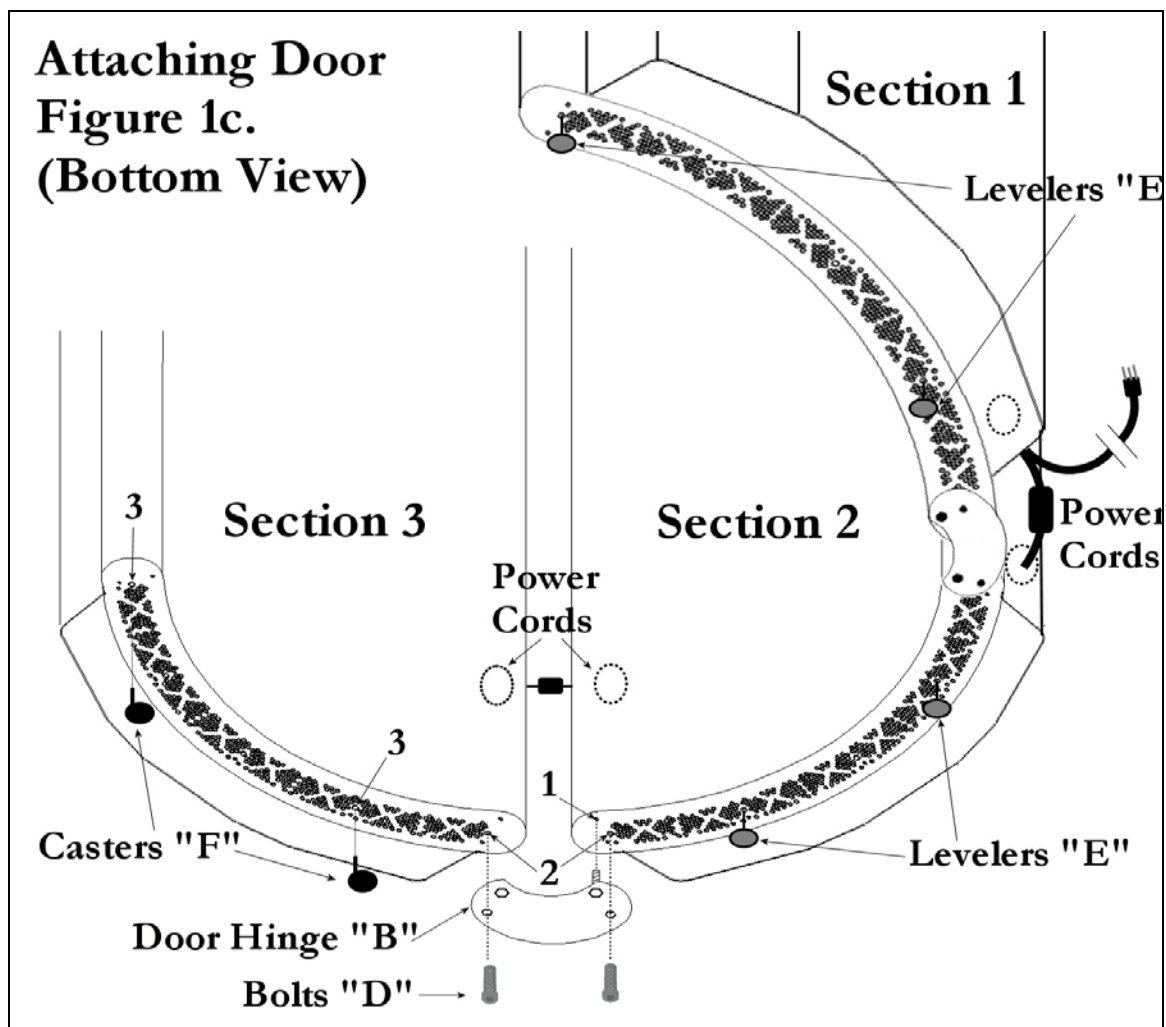

## Attaching the Door to Top of Section 2 – Figure 1d

- Step 1. During this step, make sure you do not pinch the cords between the rails of the two different sections. Align the guide bolt of hinge “C” through the “1” hole in the end cap at the top end of section 2 as shown in figure 1d.
- Step 2. Thread bolts “D” through hinge “C” into the “2” holes of the end caps at the top end of sections 2 and 3, and tighten with the supplied allen wrench. **DO NOT OVER-TIGHTEN!**

Now **CAREFULLY** position the unit upright by lifting the top end while securing the door so that it does not swing open in the process. At this time, push the booth into its permanent location. Tighten and/or loosen the levelers and nuts as necessary with an adjustable wrench to ensure proper footing of the unit. The best spot to use an adjustable wrench on the levelers is at the base of the threaded stem. **BE CAREFUL NOT TO STRIP THE THREADS!**

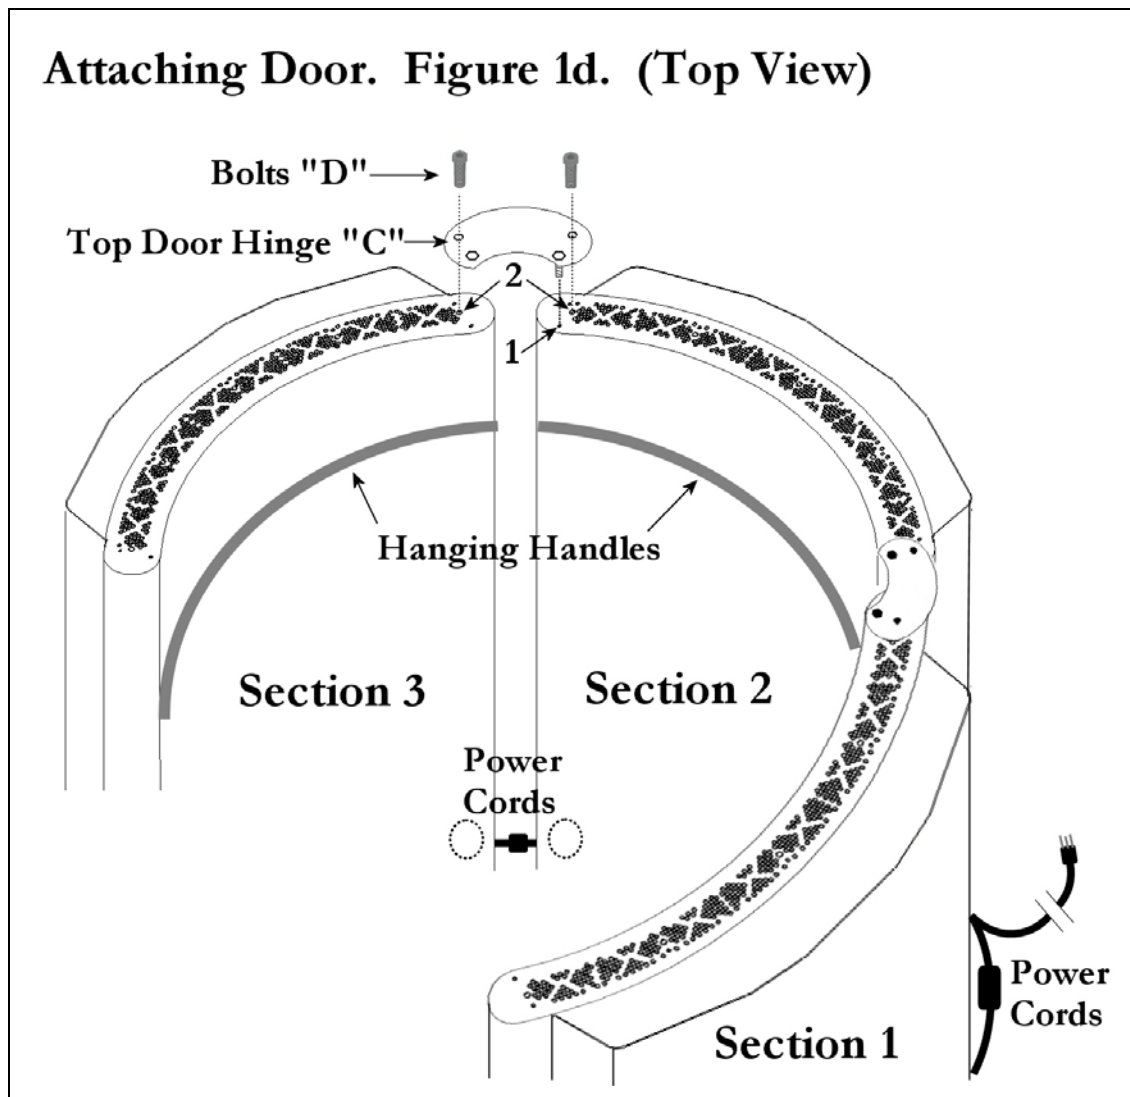



**Making the Electrical Connection** – refer to electrical requirements, page 5.

***WARNING! Be sure electrical power is disconnected before connecting the male/female inter-connecting cables.***

Step 1. Securely connect all inter-connecting power cords that run between the three sections of the unit.

Step 2. Plug the three-prong 120VAC main power cord into a 20 Amp dedicated outlet.

**NOTE: IT IS BEST TO UNPLUG THE TANNING BOOTH WHILE NOT IN USE.**

**DO NOT CONVERT THE POWER CORD TO A TWO PRONG CORD OR MODIFY THE CORD IN ANY WAY.**

We do not recommend that you connect your tanning system to an extension cord. However, if you must use an extension to reach your dedicated outlet, then it must be a 3 wire extension cord of at least # 12 gauge wire for under 12 feet. If longer than 12 feet, then you will need a 3 wire 10 gauge extension cord. (good to 25-30 ft.)

**ENSURE THAT THE POWER CORD IS ROUTED SAFELY AWAY FROM TRAFFIC AND/OR ANY HAZARDS.**

**AS RECOMMENDED FOR ALL ELECTRICAL APPLIANCES, THIS TANNING BOOTH SHOULD NEVER BE OPERATED NEAR WATER OR WHILE YOU ARE WET.**

## **Pre-Tanning Guidelines**

### **Your Skin**

Before tanning, be sure your skin is free of any tanning oils or lotions (except those approved for indoor tanning use), body lotions or cosmetics. Cosmetics or medications applied to your skin may increase your sensitivity to ultraviolet light. If you are taking any medication, or if you are especially sensitive to sunlight, we recommend that you consult a physician before using this or any tanning equipment. It is also recommended that you not bathe immediately before using this tanning booth as it removes natural body oils which protect your skin.

## Your Eyes

FDA approved eye shields are provided with this tanning booth and must be worn whenever the tanning booth is operating. **Regular sunglasses do not adequately protect your eyes from ultraviolet light.**

*FDA approved eye shields should be worn while tanning and by everyone in the room while the tanning booth is in operation.*



**DO NOT OPERATE** the tanning booth near water or while you are wet.

## Using the Tanning Booth

This tanning booth is designed for use by one person at a time. This tanning booth operates via a timer. Determine the recommended exposure time according to your skin type. See chart below.

Recommended Exposure Times – Shown in Minutes				
Skin Type:	Week 1	Week 2	Week 3	Week 4
<b>I. Sensitive skin:</b> burns easily and severely, does not tan	Not recommended for tanning!			
<b>II. Light:</b> burns easily and severely, tans minimally	2	3	4	5
<b>III. Normal:</b> burns moderately, tans average	3	4	5	7
<b>IV. Dark:</b> burns minimally, tans easily and above average	4	6	8	10
<b>MAXIMUM EXPOSURE TIME IS 10 MINUTES</b>				
<b><u>ALLOW 48 HOURS BETWEEN TANNING SESSIONS!</u></b>				

**Timer Instructions:** To begin tanning, refer to the recommended exposure time chart above.

- Step 1. If using indoor tanning lotion, apply before getting into the booth. Your Authorized Dealer can assist you with the proper tanning lotion for your skin type.
- Step 2. Put on goggles.
- Step 3. Follow instructions for lighting the booth in the Timer Instructions in the next section.
- Step 4. Open the door, enter booth, close door and stand in the center.

## 10 Minute Digital Timer Instructions

This model is equipped with a 10 minute digital timer.

To start a session, press the Set Button on the timer. The time will go to the maximum time then count down. The lamps will turn automatically. You can decrease the time by pressing the Set Button. To cancel a session, press the Start/Stop button on the timer. The display will go to a 0.

### Checking Bed Hours

Make sure the timer shows a 0. Press and hold both buttons. The timer will flash two numbers, then two other numbers, pause, two numbers, pause, etc...These are the bed hours. The first set of numbers are the thousands and hundreds digits for the bed hours. The second set of numbers are the tens and ones digits for the bed hours. For example, if the display flashes the numbers 53, then 14, pauses then repeats, then the total bed hours stored is 5314. The highest value that can be displayed is 9999.

## Caring For and Maintaining Your Tanning Booth



***THE TANNING BOOTH SHOULD BE COMPLETELY SHUT DOWN AND UNPLUGGED FROM POWER SOURCE AT LEAST TWO (2) FULL HOURS BEFORE ANY CLEANING OR MAINTENANCE TO ALLOW THE TANNING BOOTH TO ADEQUATELY COOL DOWN!!!!***

## Cleaning and Maintenance



***Warning! Disconnect booth from electrical power before cleaning.***

### Preventive Maintenance for Your Tanning Booth

Recommended Care	After Each Session	Weekly	Monthly	6 Months	Every 1000 hours
Clean goggles	x				
Inspect/clean vents		x			
Clean exterior of booth			x		
Inspect/clean reflectors				x	
Inspect/clean lamps				x	
Replace lamps					x

**NEVER USE CLEANERS CONTAINING AMMONIA AND/OR ALCOHOL.  
DO NOT USE COMMERCIAL CLEANERS SUCH AS WINDEX® OR 409®.**

**USE OF AMMONIA AND/OR ALCOHOL ON YOUR BOOTH WILL VOID THE WARRANTY!**

When cleaning the tanning booth, use a cotton towel which is much less abrasive than a paper towel. Never wipe with a dry cloth, as this will generate a slight static, which attracts dust.

## Acrylic Removal



***Warning! Disconnect booth from electrical power before servicing.***

Important Note: If you are removing the Acrylic from the door section, you must first remove the inner door handle with a Phillips screwdriver. There are two screws that attach the handle to the rail.

- Step 1. Stand inside the booth. Using a small, flathead screwdriver, insert the flat head into the top end of the black trim strip that holds the side of the acrylic. Pry outward slowly to grasp edge of strip and continue to pull away from unit until it is completely removed. Repeat procedure for second trim strip. Repeat step 1 as necessary for the acrylics on the other two sections of the booth
- Step 2. With the flathead screwdriver, pry the acrylic up and over the lip in the booth rail. Begin by grasping the long edges of the acrylic which are now exposed.
- Step 3. Standing in front of the booth, grasp the long exposed edge of the acrylic and carefully slide it toward you until it is removed. BE CAREFUL – the edges of the acrylic may be sharp.

## Acrylic Re-installation

- Step 1. Seat the acrylic into the lip of the top and bottom end caps.
- Step 2. Evenly slide it back into place by pushing from the front side while simultaneously grasping the opposite edge of the acrylic to support it away from the lamps and reflectors.
- Step 3. Replace the trim strips starting at the bottom. Take one end of the black acrylic trim and press firmly onto the aluminum frame pushing into the opening. The longer flat edge of the trim must be against the top of the acrylic.
- Step 4. Place the palm of your hand on the trim, and apply pressure along the edge until the trim is firmly in place.
- Step 5. The door handle and/or hanging handles will now need to be replaced.

## Lamp Removal & Re-installation

Tanning lamps are rated up to 1000 hours of use. You may elect to change lamps sooner.

- Step 1. After removing the acrylic, grasp a lamp at one end and at middle. Turn the lamp a quarter turn. The lamp may then be gently removed from its holder.
- Step 2. Hold lamp with brand name label facing toward the acrylic and to the top side of the booth. To install the lamp, insert the pins located on the ends of the lamp into the slots on top of the lamp holder and turn the lamp a quarter turn to hold in place. Make sure that the writing on the lamp faces the acrylic.

For lamp replacement, refer to “Lamp Cleaning” section to follow. Lamps used longer than 1000 hours have lost their tanning power even though they will continue to light.

**Only the following lamp type, certified by the United States FDA, has been certified for use in this tanning booth:**

- Solara Supreme (532003)
- Solara ReNew (532005)
- Solara ReFresh (532009)

You may purchase tanning lamps from your Authorized Dealer.



***Do not use lamps other than those specified. To do so will void your warranty and FDA certification.***



## Lamp Cleaning & Replacement

Depending on the amount of usage, it is recommended that you clean your lamps every six months. To remove the acrylic, refer to Table of Contents. After all the lamps have been removed, use a soft cloth and a non-abrasive cleaner to wipe down the aluminum reflectors. Take care not to scratch them because scratched or damaged reflectors will reduce the tanning capability of the tanning unit. Gently wipe the entire length of the lamp with a damp cloth to remove any film buildup. Vacuum reflector area using a soft brush attachment.

Helpful Service Hints	
Lamps will not light	<ul style="list-style-type: none"><li>• Is the tanning booth on using the timer system?</li><li>• Is the tanning booth plugged into the electrical receptacle?</li><li>• Are the inter-connecting cords firmly in place?</li><li>• Is your booth on a 20 Amp dedicated circuit breaker?</li><li>• Check the power supply. You may have to reset the circuit breaker. This is due to not having a 20 Amp dedicated breaker or having too many devices on the proper breaker pulling too much amperage while tanning.</li><li>• Verify that the voltage coming out of the wall is safe for this product. Your voltage should not exceed 130 Volts.</li><li>• The lamp may not be locked into place. You may need to hand twist back into locking position</li><li>• The lamp may be burnt out. Removal of the acrylic may be needed. Refer to the acrylic Removal section of this manual. Remove a lamp that lights and place it in the spot where the lamp was out. If this new lamp doesn't light in this position the ballast may need to be replaced. If it does light, the first lamp may need to be replaced.</li></ul>
Two or three lamps located next to each other are not lit	A ballast may require replacement, due to a power surge in your household electrical system. Contact your Authorized Dealer for replacement assistance.

## How to Obtain Service

1. Review the "Helpful Service Hints" on page 18.
2. If you require additional assistance, contact the Customer Service Department at the Authorized Dealer where the booth was purchased. If it becomes necessary to replace a warranty part, proof of purchase is required to obtain warranty service.

***It is important to keep your store receipt.***

3. For non-warranty parts replacement or for routine maintenance, contact your Authorized Dealer.

# **Frequently Asked Indoor Tanning Questions?**

## **May I tan daily?**

No. US FDA guidelines specify to allow 48 hours between tanning sessions.

## **How many times do I have to use the booth before I get a tan?**

That depends on your skin type and how fast you tan. It will probably take you approximately 16 sessions to achieve the results you want. (See recommended exposure time chart.)

## **Do I have to take my contact lenses out before I tan?**

No, if you wear protective FDA approved eyewear.

## **Do I really have to wear Goggles?**

Yes. DO NOT use a tanning booth without eye protection. Your eyes may be damaged by the UV rays. FDA approved goggles that you wear are very important. Your eyelids alone offer no protection against ultraviolet light, which may cause damage to the eye. Not using proper eye protection may also result in red, tired, itchy eyes, headaches and loss of night vision.

## **Nude Tanning**

Parts of the body that have never been exposed to the sun before will turn pink or even red. They might even break out with a rash. This is caused by an over-exposure to the ultraviolet rays. It takes these parts longer to start the tanning process.

## **Rashes**

Heat rashes, or “Tanner’s itch” indicate that the light and heat generated by tanning bulbs or the sun have dried your skin. Itching can also result from a reduced rate of melanin production in a particular area of your body. Melanin is the protective skin pigment found in varying amounts in everyone’s skin. If you begin tanning in the nude, you may find that previously unexposed areas develop an itch. This is natural so don’t be alarmed; just discontinue tanning for a few days, and then slowly build up time allowing melanin production to increase. Heat rashes may also have a slight redness and itching, which occurs from getting too many UV rays. It’s dryness to the skin or reactions to cosmetics, medications or foods that may contribute to this. If a medication, irritation, cosmetic or food is causing the rash, you should stop tanning until the rash disappears.

# Photosensitivity

A photosensitivity reaction does not depend on the presence or absence of a suntan or sunburn, although it often accompanies them. Photosensitivity reactions are immunological or toxicity reactions and result from the presence of photosensitizing agents and UV light. Photosensitivity reactions are characterized by reddish skin with elevated poison ivy-like bumps and can occur in areas that were not exposed to the sun. They frequently produce little or no discomfort. On the other hand, phototoxic reactions, another type of photosensitivity reaction, are usually accompanied by symptoms similar to that of sunburn. Once a person gets a photosensitivity reaction, they are more likely to have a recurrence under the same conditions in the future. (Mayo Clinic 1993)

## **Symptoms of Photosensitivity**

### **Usually severe burning**

Often occurs in patches and in small areas of the body.

### **Blotch formation**

This could be a result of heat as well as light.

### **Rash (Photodermis)**

Redness induced by light. May be the cause of itching and may appear all over the body.

### **Uneven pigmentation**

Could be the result of light exposure combined with medication, or it might be the result of non-light related factors such as genetic factors, pressure points or a fungus

**Common diseases which react unfavorably with UV light** (are exacerbated by UV):

- Herpes Simplex
- Lupus Erythematosus (swelling of the nerve endings)
- Porphyria-severe (extreme sensitivity to any source of light)
- Vitiligo (irregularly shaped patches of skin with no pigmentation and dark borders)
- Skin cancers (Basal, Squamous, and Melanoma)

Photosensitivity reactions may be triggered by medicines included in, but not limited to the following general list. (This means you might turn red or burn when taking them with exposure to the sun or a tanning booth):

If you are taking any medication, you should consult with your doctor before tanning.

#### **Antibiotics in the Tetracycline Family**

**Anticancer Drugs**  
**Anticonvulsants**  
**Antidepressants**  
**Antidiabetics**  
**Antihistamines**  
**Antihypertensive Medications**  
**Antiseptic Creams**  
**Birth Control Pills**  
**Retin-A**  
**Sulfonamides (often for urinary tract infections)**  
**Tranquilizers**  
**Water Pills**

#### **Medications to avoid when tanning**

**Acne medications**  
**Antibacterial Drugs**  
**Antibiotics**  
**Anticancer Drugs**  
**Antidepressants**  
**Antihistamines**  
**Anti-inflammatory Drugs**  
**Antiparasitic Drugs**  
**Birth Control Pills**  
**Diabetes Drugs**  
**Diuretics**  
**Psoralen Drugs (topical or oral)**  
**Tranquilizers/Antipsychotic Drugs**

For more information on photosensitivity, please see the following websites:

<http://www.fda.gov>

<http://www.emedicine.com>

<http://www.intelihealth.com>

<http://www.lupus.org>

<http://www.photosensitivity.org>

## **Pregnancy**

You should consult with your doctor before tanning while pregnant.

**FOR ADDITIONAL ASSISTANCE:**

**PLEASE REVIEW THE HELPFUL  
SERVICE AND MAINTENANCE HINTS IN  
THIS USERS MANUAL... IF YOU  
HAVE ADDITIONAL QUESTIONS...  
REQUIRE TECHNICAL SUPPORT...  
INTERESTED IN PURCHASING TANNING  
ACCESSORIES...OR FUTURE  
UPGRADES FOR NEW LAMPS... DO  
NOT HESITATE TO CONTACT THE  
AUTHORIZED DEALER SERVICE  
DEPARTMENT WHERE YOU PURCHASED  
YOUR TANNING BOOTH.**

## Warranty Information

**USE OF THIS PRODUCT IN A COMMERCIAL TANNING FACILITY OR FOR PROFESSIONAL AND MEDICAL SERVICES AUTOMATICALLY RESULTS IN THE VOIDING OF ANY AND ALL MANUFACTURER'S WARRANTIES!**

**Record and retain this information for ease of service:**

Authorized Dealer Name \_\_\_\_\_

Store Address \_\_\_\_\_

City \_\_\_\_\_ State \_\_\_\_\_

Zip Code \_\_\_\_\_ Phone \_\_\_\_\_

Salesperson \_\_\_\_\_

Date of Purchase \_\_\_\_\_

Door Serial Number \_\_\_\_\_

Center Panel Serial Number \_\_\_\_\_

Right Panel Serial Number \_\_\_\_\_

Attach your receipt to this manual.

## Warning Label Information

**DANGER!** Ultraviolet radiation! Follow instructions. Avoid overexposure. As with natural sunlight, overexposure can cause eye and skin injury and allergic reactions. Repeated exposure may cause premature aging of the skin and skin cancer. **FAILURE TO WEAR PROTECTIVE EYEWEAR MAY RESULT IN SEVERE BURNS OR LONG-TERM INJURY TO THE EYES.**

**WARNING:** Read the instruction booklet before using this sunlamp product. All persons in the room should wear protective eyewear when lamps are on. Recommended eyewear: Provided eye shields or equivalent eyewear as defined under 21CFR 1040.20. Other types of eyewear may not provide adequate protection. If discomfort develops, discontinue use and consult a physician.

Medications or cosmetics may increase your sensitivity to the ultraviolet radiation. Consult physician before using sunlamp if you are using medications or have a history of skin problems or think you are especially sensitive to sunlight. If you do not tan in the sun, you are unlikely to tan from the use of this product. Children, the elderly, or fair skinned people who always burn easily and either never tan or tan minimally, should not use this equipment.

To use, turn on booth and stand in the center, maintaining at least 2 inches (5.1 centimeters) between your body and the lamps, to avoid overexposure.

Manufactured by: LPI  
1044 Fordtown Rd Kingsport, TN 37673  
Phone: 1-800-208-6369

This product is in conformity with performance standards for sun lamp products under 21 CFR Part 1040.20 and ANSI/UL Standard 482.

Never tan more than once a day and allow 48 hours between tanning sessions. Tanning normally appears after the first few sessions and maximizes after approximately four weeks. Tan once or twice per week thereafter to maintain desired appearance.

### ONLY THE FOLLOWING LAMPS HAVE BEEN CERTIFIED FOR USE IN THIS EQUIPMENT:

Solara Supreme (532003)      Solara ReNew (532005)      Solara ReFresh (532009)

### **RECOMMENDED EXPOSURE TIMES – IN MINUTES MAXIMUM EXPOSURE TIME IS 10 MINUTES**

SKIN TYPE		WEEK:	1	2	3	4
1	Sensitive Skin (Burns easily and severely and does not tan)	NOT RECOMMENDED FOR TANNING				
2	Light (Burns easily and severely and tans minimally.)		2	3	4	5
3	Normal (Burns Moderately and tans average.)		3	4	5	7
4	Dark (Burns minimally, tans easily and above average.)		4	6	8	10

### **RECOMMENDED EXPOSURE TIMES – IN MINUTES**

Made in the U.S.A.